

UWELL

Manufactured by SHENZHEN UWELL TECHNOLOGY CO., LTD.

©2018 By SHENZHEN UWELL TECHNOLOGY CO., LTD., All Rights Reserved.
Made in china

www.myuwell.com



MYUWELL



MYUWELL



MYUWELL



MYUWELLOFFICIAL



CALIBURN

CALIBURN Portable System Kit
User Manual

Specification

Material: Aluminum alloy, PP, PC, ABS

Size: 110 mm × 21.2 mm × 11.6 mm

Net Weight: 30 g

Juice Capacity: 2 ml

Maximum Wattage: 11 W

Standby Current: < 50 μ A

Voltage Range: 3.2 V - 4.0 V

Resistance Range: 1.4 Ω $\pm$ 0.1 Ω

Battery Capacity: 520 mAh

The kit includes

1 × CALIBURN Portable System Kit

1 × CALIBURN Pod Cartridge



1 × Micro USB Cable

1 × User's Manual

Features

1. Draw-activated mechanism and manual button, two ways to start your vape experience.
2. Draw-activated mechanism fault diagnosis function, if the draw-activated mechanism fails, the program will automatically close the draw-activated working mode, and the manual button can work normally.
3. Quickly click the fire button 5 times to turn on/off the device, safe and reliable.
4. Refillable pod cartridges, cost-effective to use.
5. Top filling method, quick and convenient.
6. The Pro-FOCS flavor testing technology gives you an excellent vape experience.
7. Simple and stylish appearance, with various colors available.

Illustration

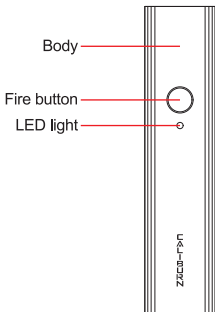

Please read the following information before use

1. Pull out the pod cartridge, and remove the drip tip.
2. After filling juice from the filling hole, put the drip tip back on, and install the pod back to the body, prime it for 10 minutes before use.
3. Click the fire button 5 times to turn on the device, take a draw directly or press the fire button to vape.

Detailed instructions

1. Power on/off

Click the fire button 5 times in 2 seconds to turn on/off the device, the LED will flash green 3 times.

2. Vaping

When the device is on, take a draw or press the fire button to vape, the LED will stay on. The device will automatically stop firing when the button is held for longer than 10 seconds then the LED will flash green 5 times.

3. LED indicator


The color of the LED during vaping can indicate the remaining capacity of battery: when the capacity is over 60%, the color of the LED is green; when it's within 30%-60%, the color of the LED is blue; when it's below 30%, the color of the LED is red; When the LED flashes red 10 times, it indicates low battery and stops output.

4. Charging

When charging the device with Micro USB cable, the indicator light flashes slowly to indicate that the product is charging. It will flash red to indicate low battery, flash blue to indicate medium power, flash green to indicate sufficient power, and the green light stays on after charging is completed.

5. Filling instruction

- Pull off the pod cartridge.
- Remove the drip tip.
- Add the juice.
- Put the drip tip back on.
- Install the pod back on the body.

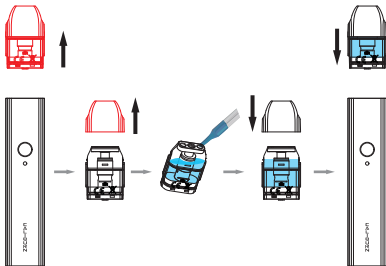

Attention:

- Do not leave the drip tip off for a long time, install drip tip back securely after refilling to prevent leaking.
- Don't put juice in the center hole.
- When using a new pod and then filling the pod, please let the pod sit for 10 minutes to avoid coil burning.
- When filling only use a bottle that has a nozzle that can fit inside the opening of the tank which is 3.5 millimeters wide.

6. Changing the pod cartridge

Pull off the used pod cartridge and install a new one.

Protection features

1. Draw-activated mechanism fault diagnosis function

If the draw-activated mechanism fails, the program will automatically stop the draw-activated working mode, and the manual button can work normally.

2. Short-circuit protection

When short-circuit occurs, press the fire button the LED will flash red 3 times to indicate short-circuit and stop output.

3. Low power alert

When the device is in low battery, the LED will flash red 10 times to indicate low battery and stop output.

4. Vaping over time alert

The device will automatically stop firing when the button is held for longer than 10 seconds then the LED will flash green 5 times.

Green light is on	Stays on when vaping to indicate the sufficient power
Blue light is on	Stays on when vaping to indicate the mediate power
Red light is on	Stays on when vaping to indicate the low power
Flash green 3 times	Power on/off
Flash green 5 times	Vaping over time
Flash red 3 times	Short-circuit alert
Flash red 10 times	Low battery alert
Flash red slowly	The device is in low power during charging
Flash blue slowly	The device is in mediate power during charging
Flash green slowly	The power is sufficient during charging
Green light constantly keeps on	The device is fully charged

Attention

1. Please charge with certified high-quality adaptor from a reputable company and a Micro USB cable with the charging current of 5V/1A.
2. The device may warm up when charging, keep away from flammable and explosive goods.
3. Please use a dry and soft cloth to clean the mod. Keep away from water or any liquids.
4. Please do not put the device in your pocket with other hard objects to avoid damages.
5. Please turn off the device when it is not in use.
6. Please charge the device at least once a month.
7. Don't disassemble the device.
8. Avoid high temperature, low temperature and humidity during use or storage to avoid damage to the equipment.
9. All pictures shown are for illustration purpose only, actual product may vary due to product enhancement.
10. For up-to-date pictures and parameters, please see the official website.

Safety Instruction

Please read the following safety instructions carefully before using the product.

1. This product is only available to people who have reached the legal age of smoking. It is strictly forbidden for young children, pregnant women and women during breastfeeding or for patients with heart disease, high blood pressure, diabetes, depression and asthma.
2. Please put the product out of reach of children and pets to avoid injury.
3. When using this product, please keep away from inflammable and explosive materials to avoid injury.
4. The company does not assume any responsibility for any equipment damage or personal injury caused by user misuse.

Warranty Details

Please keep the anti-counterfeit code and proof of purchase after purchasing the product. The warranty period is 180 days from the date of purchase. Our company provides warranty service (Device only, the pod cartridge is not covered by the warranty).

Please note that any of the following conditions are not covered by the warranty:

1. Exceeding the warranty period.
2. Damage caused by the use, maintenance, and storage that is not in accordance with the requirements as instructed.
3. Damage caused by unauthorized repair.
4. Damage caused by the usage of the components from other brands.
5. Damage caused by force majeure.

Verification

1. Visit the official website www.myuwell.com through a smartphone or PC.
2. Please enter the 16 digits authentic code, and the result will be displayed in a few seconds.
3. Please feel free to contact us via e-mail, phone or website for more help.

Customer Service

We pride ourselves on manufacturing quality products and providing excellent customer service. For any issues, please contact us at service@myuwell.com.

* Shenzhen UWELL Technology Co., Ltd. reserves the right of final interpretation in the user manual.

* It is hereby stated that the markable area on the product is not enough to mark the CE and WEEE as the standard dimensions.